

REDipix.com Box Mount Kit Instructions

Your kit contains one or more box mount frames with adhesive on the front and hanging wire on the back. Included with the order is one trimming knife with extra blades and a hanging hardware pack for each print. Save the cardboard pad from the shipping box for trimming the print.

Please read all instruction steps before starting. You should also watch our video on [youtube.com](https://www.youtube.com) (search for Redipix).

- 1) Measure box and add ¼ to ½ inch total bleed so the print size will be larger than the box.
- 2) Make or buy your print. Heavy weight papers work best since the print is not supported starting about 1/16 inch from the edge.
- 3) Wash your hands or wear cotton gloves.
- 4) Trim print to borderless. Check to be sure it is slightly larger than the mounting box. Scissors work fine.
- 5) Place box face up on table. Center print face up on box and place some weights such as a few books on one end covering no more than half the box. In case the weights are dirty, place a clean cloth under them. Check all around that the print is centered and move if necessary.
- 6) Note that in the next few steps you have only one chance to stick the print to the box. The adhesive is permanent and not repositionable.
- 7) Lift up the free end of the print and peel half the protective paper from the adhesive and remove completely.
- 8) Starting from the center, press down with one hand on the print and move towards the side while lowering the print with the other hand.
- 9) Rub your hand from the center out a few more times to set the adhesive and be sure there are no bubbles under the print.
- 10) Remove the weights and repeat the last three steps for the other side.
- 11) Place the cardboard pad from the shipping box on the table. Do not use newspaper since ink may transfer to the print. Do not cut on a cutting mat or any other surface.
- 12) Test the provided cutting knife on a scrap piece of the same paper used for your print. It should cut all the way through the paper and into the cutting board. If you do not get a smooth cut, change the blade according to instructions below.
- 13) Place the mounted print face down on the cardboard pad. Hold in place with one hand. Place the provided cutting knife against the side of the print at the top and bring it down along the side of the print while pushing down and towards the print. As you finish the cut at the bottom, make sure the knife continues parallel to the side of the box.
- 14) Continue with the other three sides.
- 15) Inspect your print. If the edge is raised up a little along the cut, gently run the side of a smooth pencil or pen along the raised edge to press it down.
- 16) Insert the blue connectors into the holes in the panel on the back. You may have to push hard with a tool such as a screwdriver. For large prints you should place a dab of glue such as epoxy in the hole before inserting the connector.
- 17) To protect your print from damaging UV light, you should apply a coating such as PremierArt Print Shield. Be sure to coat the sides of the mounting as well as the face of the print.

Changing the blade

- 1) Note the position of the existing blade.
- 2) Remove the tape from the existing blade and wrap the tape around it for safe disposal. Try not to damage the sticker that is used for blade positioning.
- 3) If you need to replace the positioning sticker, align the bottom of the sticker with the bottom of the cutter.
- 4) Hold the blade with a finger on the bottom half of the blade. With your other hand (or employ a helper) place tape on the top half to hold it in place.
- 5) Place another piece of tape along the bottom half of the blade.
- 6) Test the knife on a scrap piece of printing paper.